Ticketflex Universal Hopper Controller TFB1-AS

Convert Tickets to Coins/Tokens

Buy on-line | Email Us | Get the latest on Twitter

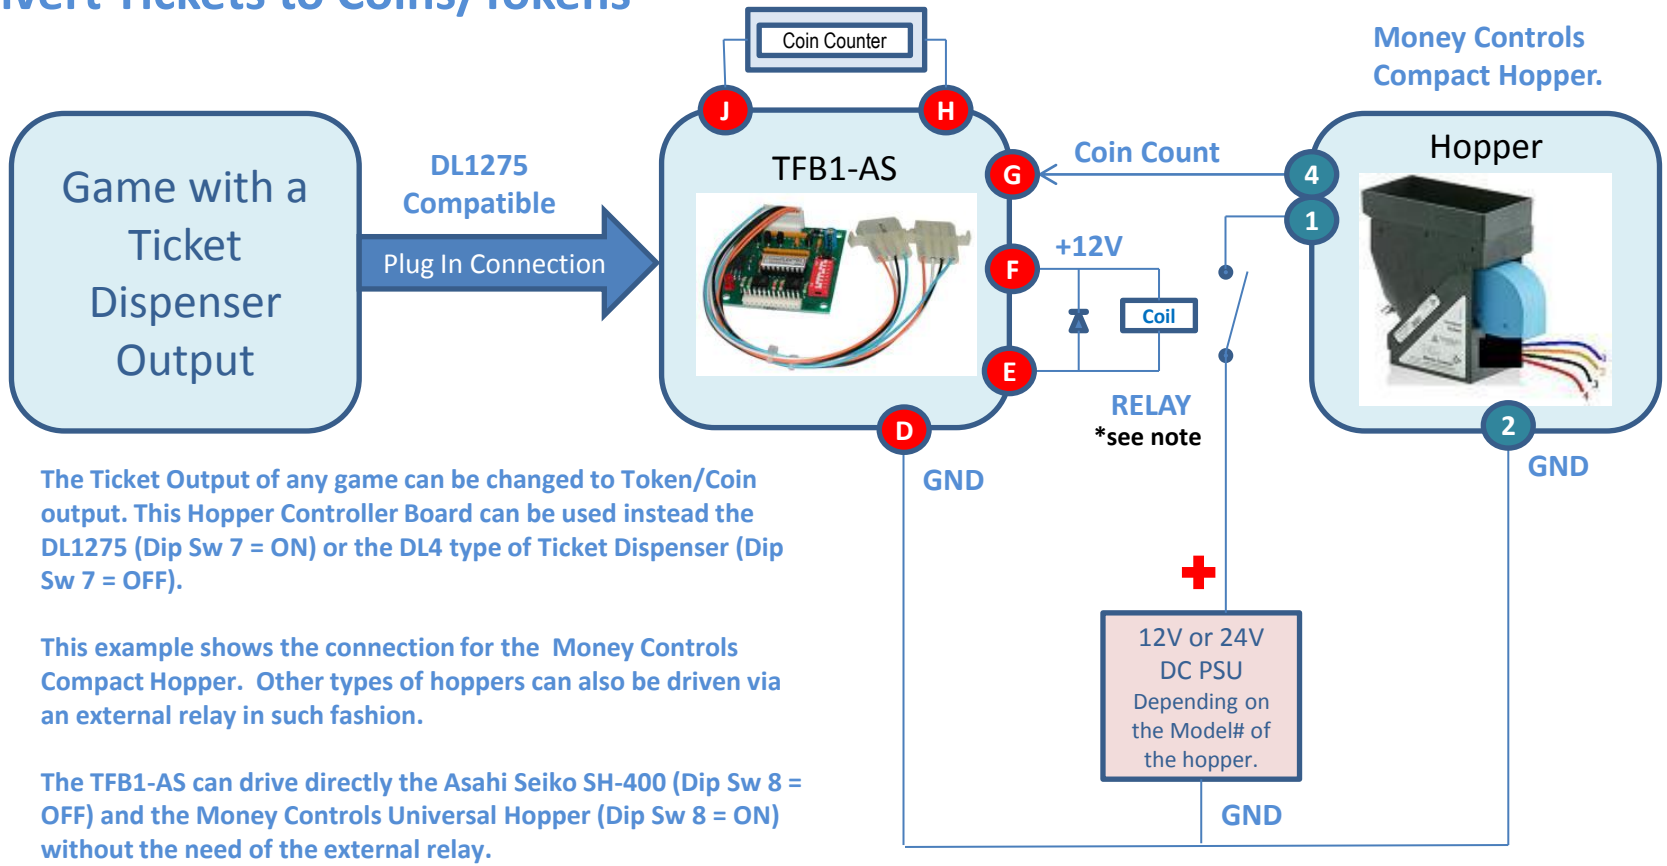

The Ticket Output of any game can be changed to Token/Coin output. This Hopper Controller Board can be used instead the DL1275 (Dip Sw 7 = ON) or the DL4 type of Ticket Dispenser (Dip Sw 7 = OFF).

This example shows the connection for the Money Controls Compact Hopper. Other types of hoppers can also be driven via an external relay in such fashion.

The TFB1-AS can drive directly the Asahi Seiko SH-400 (Dip Sw 8 = OFF) and the Money Controls Universal Hopper (Dip Sw 8 = ON) without the need of the external relay.

Ticketflex Harness

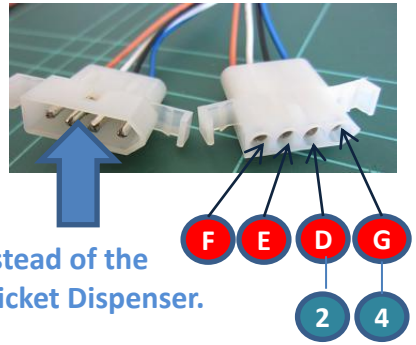

Plug in instead of the DL 1275 Ticket Dispenser.

12 Way JST Connector

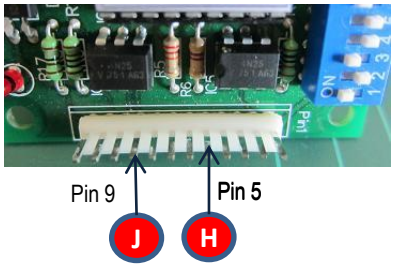

Coin Counter
(Counts Coins Out)

Dip Switch & Jumper Setting

SW 1 to 4 – adjust coin payout
SW 5 – Time Bonus OFF/ON
SW 6 – Divide/Multiply
SW 7 – ON (DL1275 Mode)
SW 8 – OFF
See the Instruction Sheet for more details.
JUMPER = ALWAYS UP (further away from the edge of the board)

Hopper Connector

1. Positive Supply & Motor Control 24V or 12V depending on Model #
2. GND
3. Opto Supply – Not used in this example
4. Coin Count Output

***NOTE: Install a diode across the relay coil. See more notes!**